



Loading procedure for hydraulic paddle agitated hydroseeding machines

Please refer to your equipment manufacturer's loading instructions - if not available please follow the loading procedures outlined below

1. Add water to the tank up to the agitator level.
2. Engage the pump and flush all of the plumbing with water.
3. Run the agitator in full reverse or mix position / or in full forward if your unit is not equipped with reverse agitation.
4. Load liquid and dry materials as the water continues to fill.
 - Load light materials first – seed, tackifier, biostimulants, water soluble fertilizer, etc.
 - Load hydromulch – do not manually break apart the hydromulch, the machine will do it. Load through the shredder box if your unit is equipped with one.
 - Load granular fertilizer last, immediately prior to making the application.
5. When all of the materials and water are loaded – agitate until all of the dry materials are broken apart and hydrated. If your machine has forward and reverse agitation, agitate in both directions.
6. The slurry is now ready.
7. Put the agitator in the forward or in the spray position.
8. Run the agitator slow if possible.
9. Adjust the pump rpm for a desired spray pattern and spray distance.

For additional loads – repeat steps #1 through #9